

- A. Insert the Jack into the opening in the Patch Panel at an angle with the non-flexing side of the keystone latch facing down as shown in figure 1.

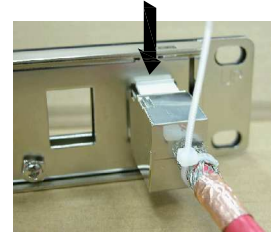


FIGURE 1

- B. With the bottom latch engaged to the Patch Panel, rotate the Jack upward until the flexing side of the keystone latch engages with the Patch Panel as shown in figure 2. There should be a slight clicking sound as the latch engages.

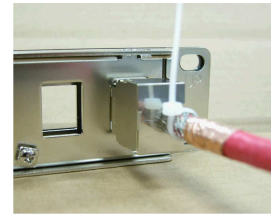


FIGURE 2

- C. Screw drain wire (NOT INCLUDED) to the Patch Panel first. Align the tongue on one side of the wire minder with the corresponding groove on the Patch Panel and insert it into the groove- see figure 3.

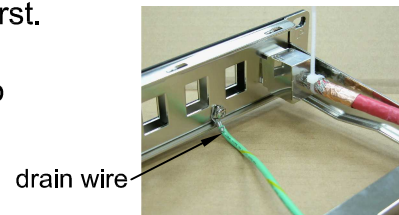


FIGURE 3

- D. Align the tongue on the other side of the wire minder with the corresponding groove on the Patch Panel and insert it into the groove -see figure 4.

Push the wire minder down in the slot- see figure 5.

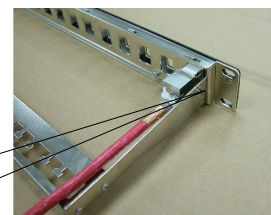
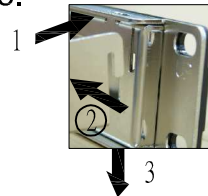


FIGURE 4

- E. After installing two Jacks, use a tie wrap to attach their wires to the cable management as shown in figure 6. Do not over tighten the tie wrap! It should be snug, but not so tight that it crushes the wires. Continue this until all the Jacks have been installed.

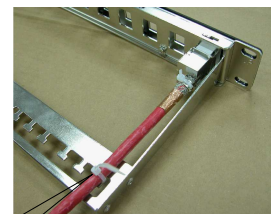
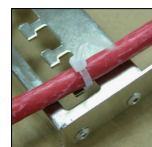


FIGURE 5